




Samsung TL220 LCD Screen Replacement

This guide will give you clear instructions and pictures on how to replace the LCD screen in the Samsung TL220 camera.

Written By: Lesley

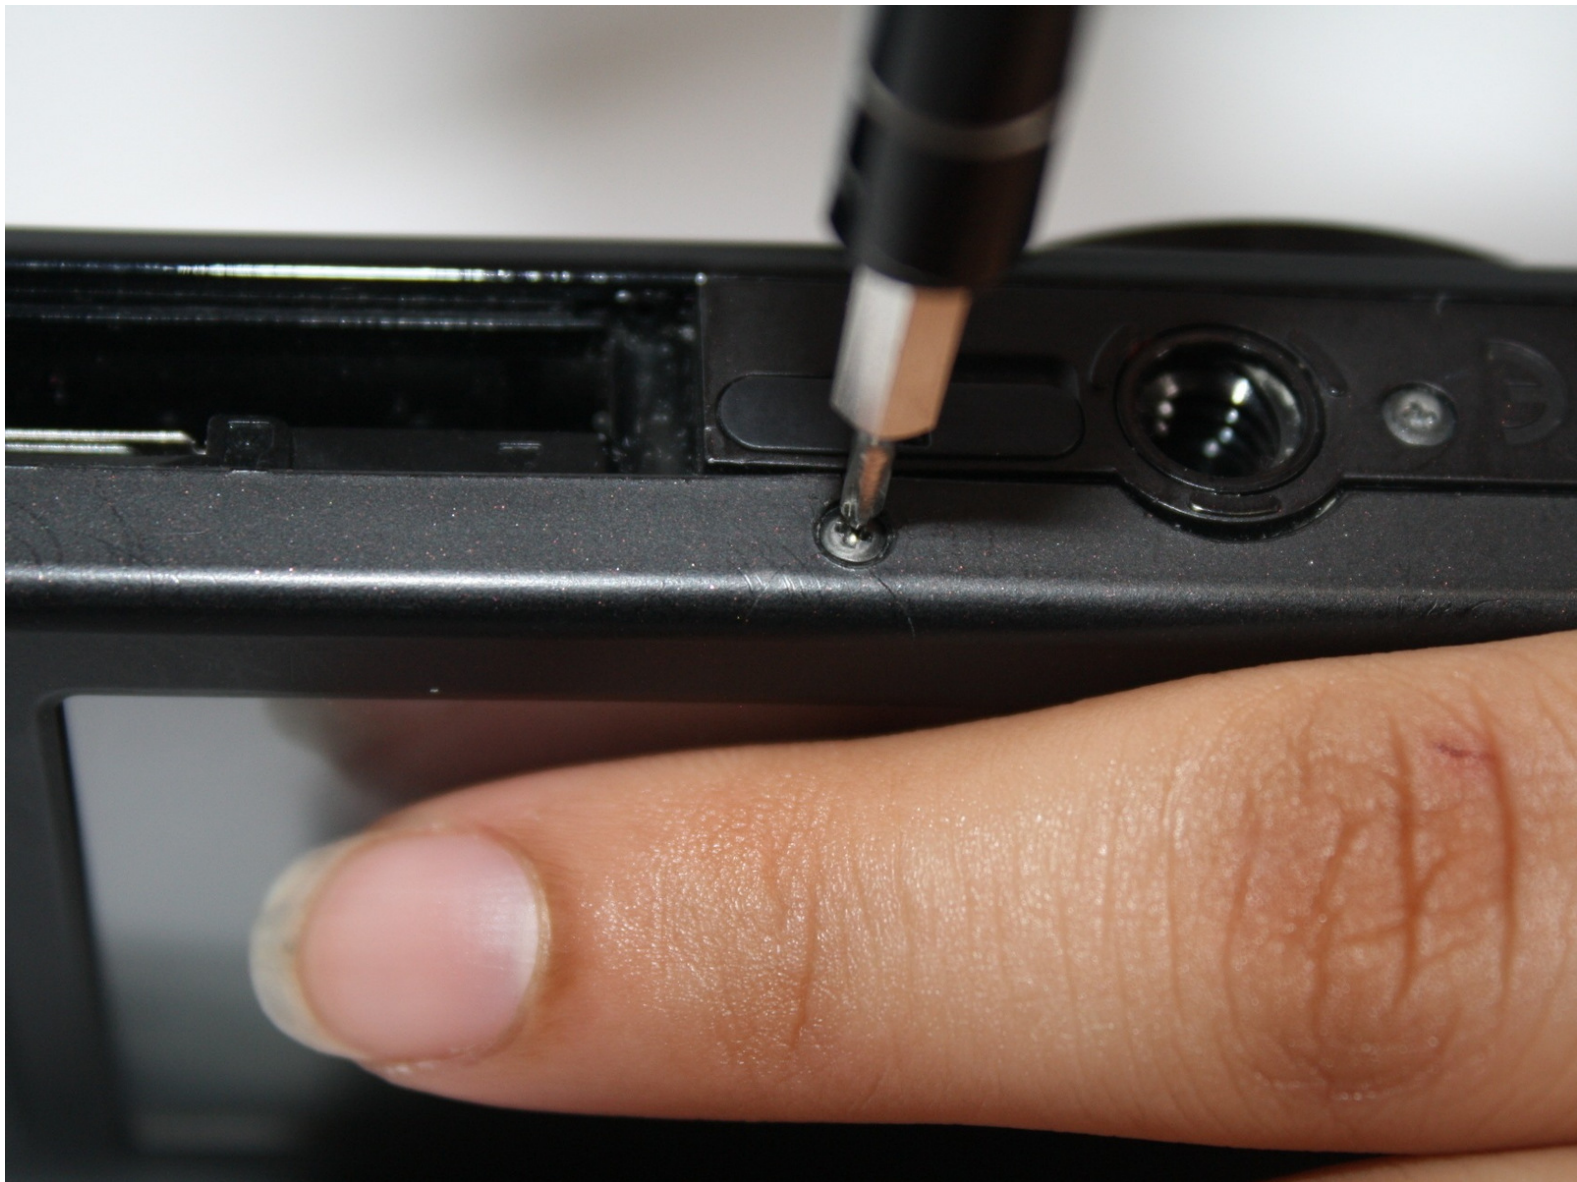




TOOLS:


- [iFixit Opening Tools](#) (1)
 - [Pro Tech Toolkit](#) (1)
-

Step 1 — LCD Screen

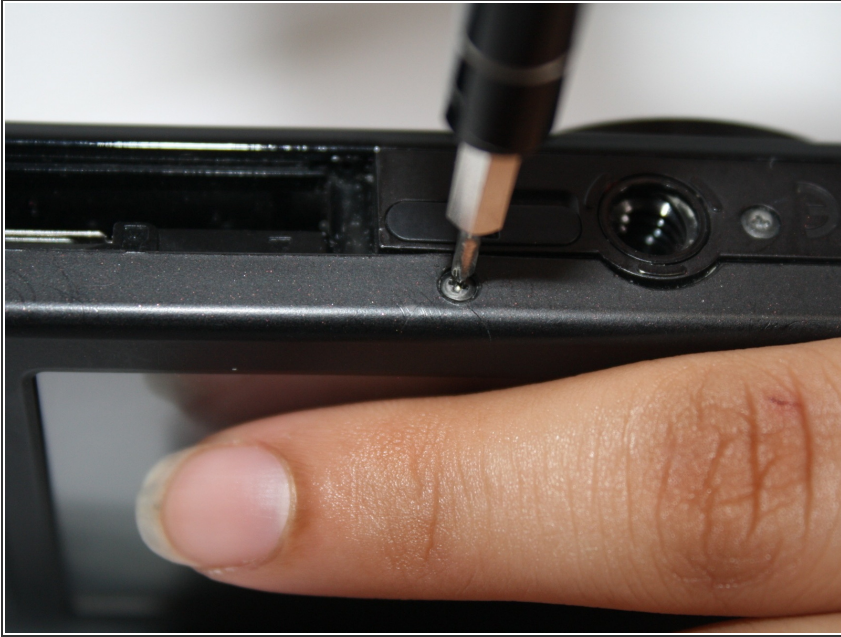

- Begin with unscrewing the seven outer screws on the camera. There is one on each corner and then three at the bottom.

Step 2

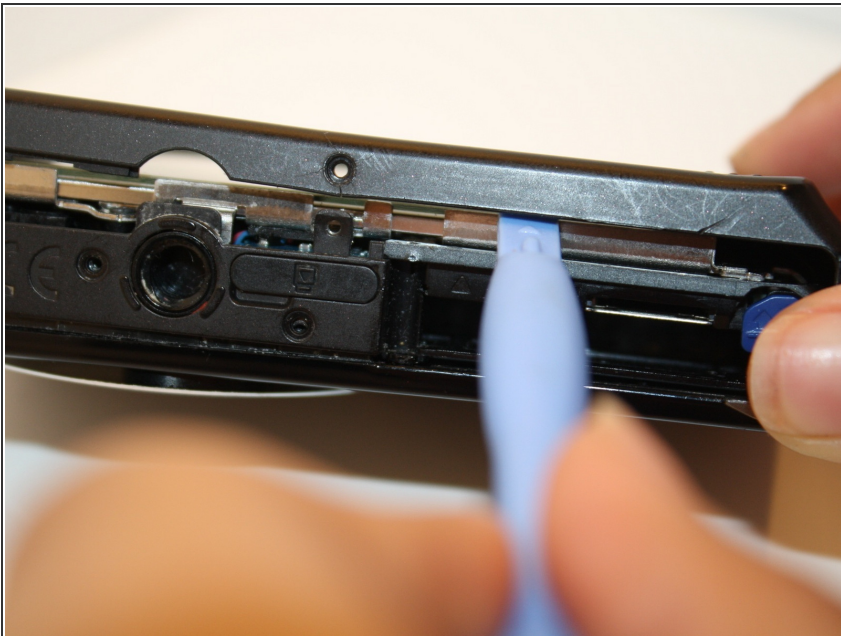


- Now carefully pry open the back casing with the ifixit plastic opening tool.

Step 3




- When the back casing is off, gently move the LCD screen to the side.
- And then remove the three inner screws to remove the inside case.

Step 4

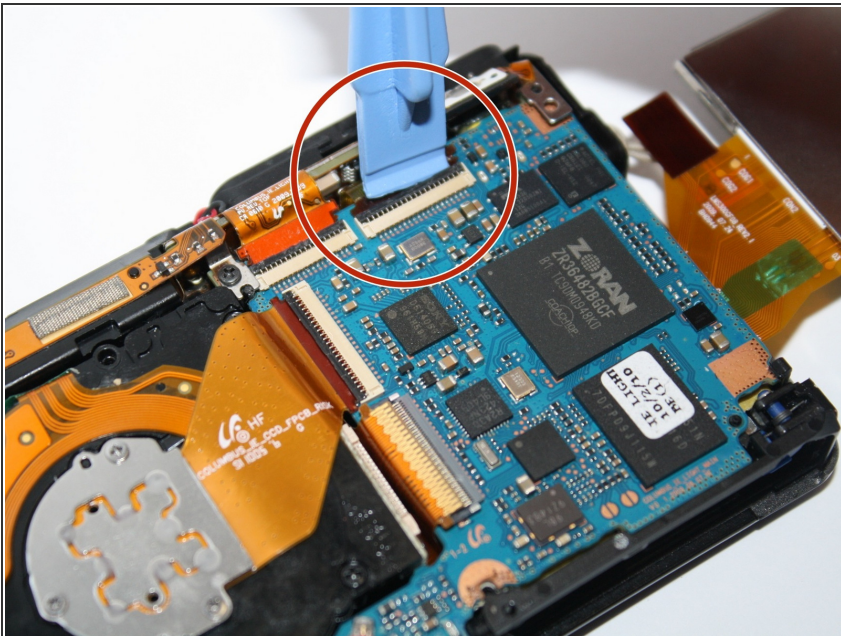

- Unclip the four connectors that hold down the orange copper film strips.
- Then carefully pull out the three film strips with the ifixit plastic opening tool.

Step 5

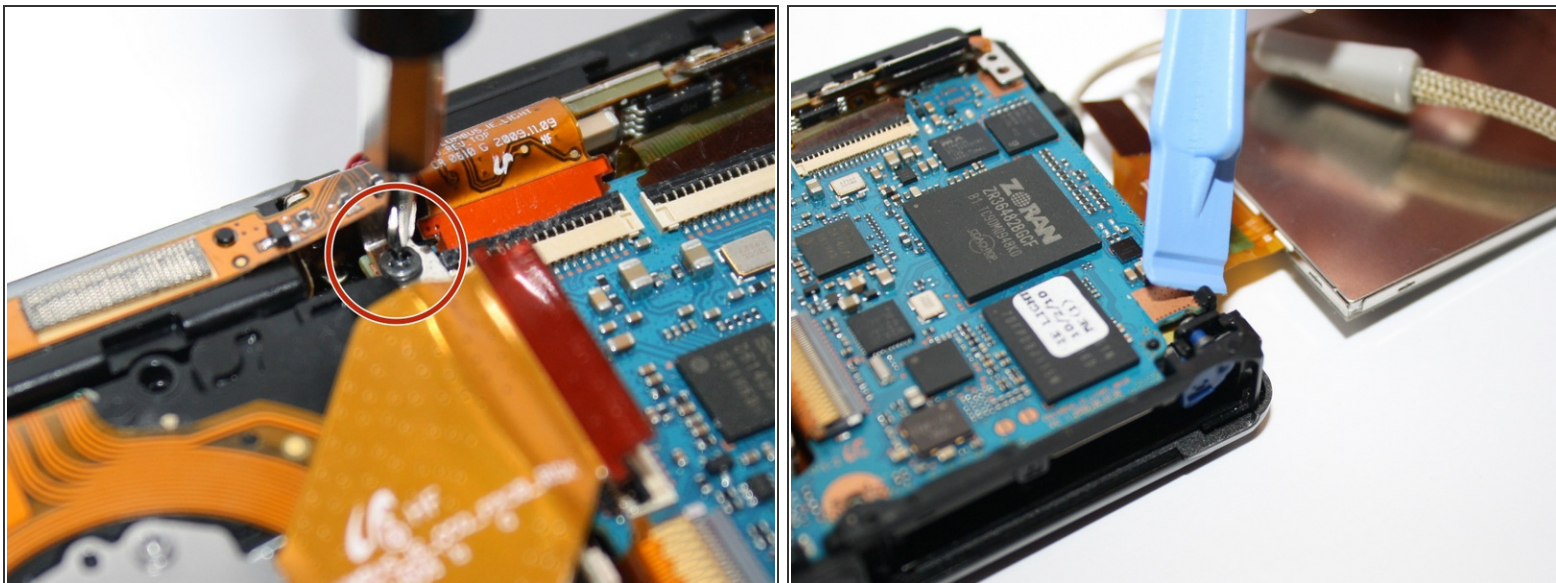


- Remove the screw located above the center film strip. This holds the top frame in place.

Step 6



- Unclip the four connectors to release the film strips.

Step 7

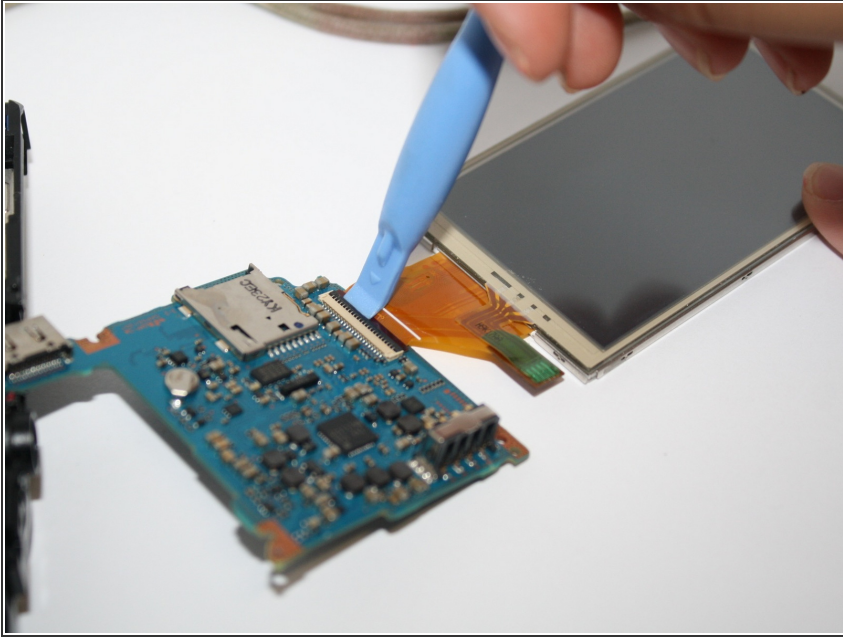

- Next unclamp the connector to release the film strip and then you can replace your LCD screen.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-19 03:28:49 PM.